

# INSTALLATION INSTRUCTIONS

The very first thing you need to do to make this installation successful is to take off the back of your window and verify that the front frame (the part that is outside when your door is shut) is sealed well. If it is not, it would be in your best interest to seal it with double-sided tape or silicone. They are supposed to be sealed well from the factory, but I am finding that most are not.

## **Required Tools:**

Phillips head screwdriver, double-sided tape, duct tape, razor blade, and a tool to break the seal of the original glass. I use a carpet knife. Some windows are sealed better than others, but some you don't even need a tool to get the glass out. The seal is just a small bead of silicone.

## **FIGURE 1:**

Remove screws from back of frame.



**CAUTION:** PLEASE HOLD ONTO GLASS WHEN REMOVING THE BACK FRAME BECAUSE SOME WINDOWS ARE NOT SEALED WELL AND I HAVE HAD THE WINDOW JUST ABOUT FALL OUT WHEN BACK IS REMOVED.

## **FIGURE 2:**

Use a sharp knife or tool to break the seal of the window and make sure to place the window in a safe place so that if you decide to sell or trade your RV, you can take out the stained glass and replace it with the original glass window.



## **FIGURE 3:**


Place the double-sided tape on the inside of the frame all the way around, making sure that you have a complete seal around the edge with the tape. After making sure that all the edges are covered, remove the paper on the outside of the tape.

**CAUTION:** PLEASE MAKE SURE THAT YOU HOLD ONTO THE WINDOW UNTIL THESE NEXT TWO STEPS ARE COMPLETED.



**FIGURE 4:**

Place the window on the tape making sure that it is centered and inside of all the pegs where the screws connect the frame.

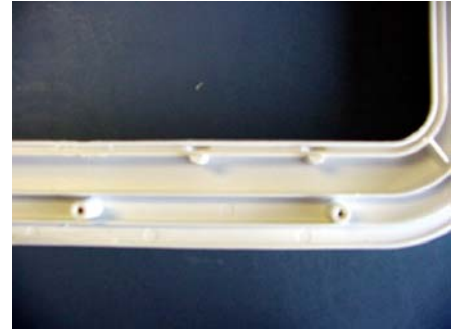

**FIGURE 5:**

Take a piece of duct tape (approximately 6") and center it over the top of the window. Press it down onto the frame. Repeat this on the bottom and each side. This is a precautionary measure and it will help to secure your window in case your pegs ever break off.

Place the back of the frame back in place in the door and replace all screws. I recommend using a hand screwdriver so you can feel the 2 frames tightening. Sometimes the power screwdrivers are too powerful and may crack the edge of the window if you don't have it aligned correctly. You will need the razor to trim the 2 way tape that may be showing on the outer edge in the front and any duct tape that may be showing in the back.



GOOD LUCK AND IF YOU HAVE ANY QUESTIONS EMAIL ME AT: [kathymagarelli@yahoo.com](mailto:kathymagarelli@yahoo.com)